

Instruction Manual

d001	001-512	512 address setting
CH01	CH03	three channel modes
	CH07	seven channel modes
Auxx	01	white
	02	gradually color
	So01	voice control jump
	So02	voice control strobe
St00	St01	Automatic host without strobe
	St16	Automatic host strobe speed from slow to fast
SP00	SP01	Automatic host Au08 Au08 Au10 speed from slow to fast
	SP16	
Sn00	Sn01	Automatic host voice sensitivity from slow to fast
	Sn16	
W000	W000	White maximum brightness setting
	W255	
H000	H000	motor operation
	H255	
RES		Enter reset
P000	P100-P250	Long press the Enter to adjust the stroke

Three Channel Modes

channle	function	description
1	0-255	motor operation
2	0-255	white dimming
3	250-255	reset
	0-10	wireless
	10-20	Linear rating 1
	21-30	linear rating 2
	31-40	linear rating 3
	41-249	linear rating 4

Seven Channel Modes**Seven Channel Modes**

channle	function	description
1	0-255	Motor operation
2	0-255	motor speed
3	0-255	white dimming
4	0-255	strobe
5	0-255	auto effect selection
6	0-255	auto speed
7	250-255	reset
	0-10	wireless
	10-20	Linear rating 1
	21-30	linear rating 2
	31-40	linear rating 3
	41-249	linear rating 4