


200W LED COB PAR



User manual

Please read the instructions carefully before use

1、 Button display

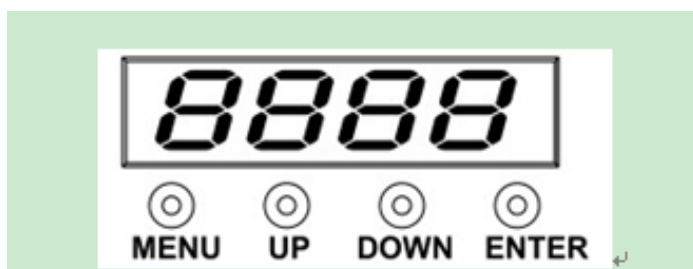

2、 Display

d001	001-512	DMX Address
CH01	CH03	3 CH
	CH07	7 CH
Auxx	01	White
	02	Color Gradually
	So01	Voice-activated jump
	So02	Voice-activated strobe
St00	St01	Automatic host without strobe
	St16	Automatic host strobe speed from slow to fast
SP00	SP01	Automatic host Au08 Au09 Au10 speed from slow to fast
	SP16	
Sn00	Sn01	Automatic host voice control sensitivity from slow to fast
	Sn16	
W000	W000	White maximum brightness setting
	W255	
H000	H000	Motor operation
	H255	
RES		Confirmation key reset
P000	P100-P250	Long press the confirmation button

3、 Channel

3CH

Channel	Function	Function description
1	0-255	Motor operation
2	0-255	White dimming
3	250-255	Reset
	0-10	Wireless
	10-20	Linear level 1
	21-30	Linear level 2
	31-40	Linear level 3
	41-249	Linear level 4

7CH

Channel	Function	Function description
1	0-255	Motor operation
2	0-255	Motor speed
3	0-255	White dimming
4	0-255	Strobe
5	0-255	Self-propelled effect selection
6	0-255	Self-propelled speed
7	250-255	Reset
	0-10	Wireless
	10-20	Linear level 1
	21-30	Linear level 2
	31-40	Linear level 3
	41-249	Linear level 4

