


4x100W Led Blinder User Manual

1. Details:

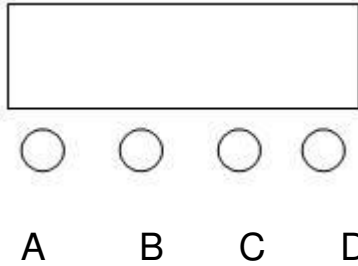

- A. Function Key
- B. Plus
- C. Minus
- D. Enter
- E. Display

Instructions: Press function key A to cycle out different functions, Press B or C key to change the value, press D to enter and confirm.

2. LED Display (Select the function and press D to enter)

1	d001	5CH B、C key to add or reduce address value (001-511)
2	d.001	9CH B、C key to add or reduce address value (001-511)
3	CC01	Jump function B、C key to add or reduce value (01-99)
4	CP01	Gradually function B、C key to add or reduce value (01-99) Function 12 can change its effect
5	dE01	Pulse Function B、C key to add or reduce value (01-99) Function 12 can change its effect
6	dENo	J+G+P Function, function 12 can change its effect
7	bEbE	Sound control J+G+P Function 12 can change its effect
8	r255	White light manual dimming
9	G255	White light manual dimming
1 0	b255	White light manual dimming
1 1	W255	White light manual dimming
1 2	dr01	Dimming mode (1-5)5 dimming modes (Mode1 Linear dimming) (Mode2 Turn on and off Linear dimming) (Mode3 Low gray soft light Linear dimming) (Mode4 Regular Linear dimming slow) (Mode5 Low gray soft light Linear dimming slow)

3. DMX512CH

5CH

Channel	Function	Function Control
CH1	WHITE brightness (W)	0: off 1-255dimming
CH2	WHITE brightness (W)	0: off 1-255dimming
CH3	WHITE brightness (W)	0: off 1-255dimming
CH4	WHITE brightness (W)	0: off 1-255dimming
CH5	Dimming mode Selection Less than 10 is Display menu Function12 choice dimming mode	(0-9 Menu Settings dimming mode) (10-50 Mode1 Linear dimming) (51-101 Mode2 Turn on off Linear dimming) (102-152 Mode3 Low gray soft light Linear dimming) (153-203Mode4 Regular linear dimming slow) (204-255Mode5 Low gray soft light Linear dimming slow)

9CH

Channel	Function	Function Control
CH1	Total dimming (W)	0: off 1-255dimming
CH2	WHITE brightness (W)	0: off 1-255dimming
CH3	WHITE brightness (W)	0: off 1-255dimming
CH4	WHITE brightness (W)	0: off 1-255dimming
CH5	WHITE brightness (W)	0: off 1-255dimming

CH6	Strobe	0-9: off 10-255 from slow to fast
CH7	Auto Function	10-50 Jump 51-100 Gradually 101-150 Pluse 151-200
CH8	Function Speed	0-255 from slow to fast
CH9	Dimming mode Selection Less than 10 is Display menu Function12 choice dimming mode	(0-9 Menu Settings dimming Mode) (10-50 Mode1 Linear dimming) (51-101 Mode2 Turn on off Linear dimming) (102-152 Mode3 Low gray soft light Linear dimming) (153-203 Mode4 Regular linear dimming slow) (204-255 Mode5 Low gray soft light Linear dimming slow)

4. Function

(The refresh rate of the lamp beads of this fixture is as high as 20KHZ) The operation is very simple, the user-friendly design, and the dimming does not flicker and shake. It can be adapted to occasions with strict lighting requirements such as photography, photography, and television

This fixture adopts M3 core 32bit_ARM processor, soft light, no jitter, real-time calculation of console data, and real-time update. Realization of non-delay soft light color mixing, added 5 kinds of dimming mode, users can set different dimming mode according to different scenarios.