


LED Pixel Zoom bar

6pcs 40W RGBW 4-in-1 LED



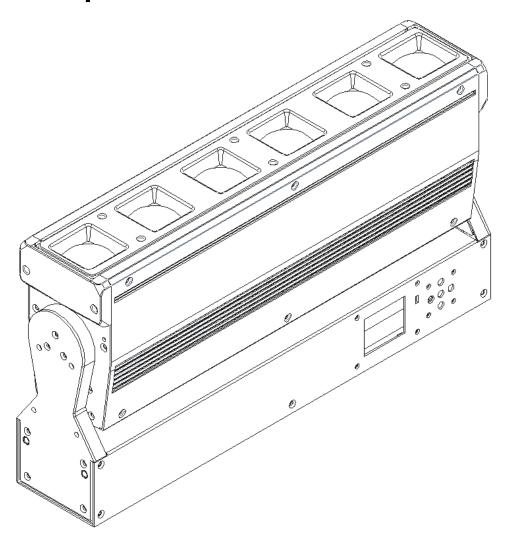

User Manual
KEEP THIS MANUAL FOR FUTURE NEEDS

1. Unpacking

Thank you for choosing our LED Pixel Zoom bar 240. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

This fixture is made of a new type of high temperature strength of engineering plastics and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

4-IN-1 LEDs(RGBW) which features high brightness and stability. Please carefully unpack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:


LED Pixel Zoom bar 240----One Power Cable----One


3-Pin Signal Cable----One Safety Cable----one


Omega Bracket----Two User Manual----One


2. Fixture size

Unit of length: mm

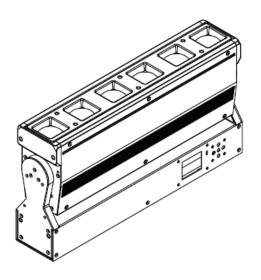


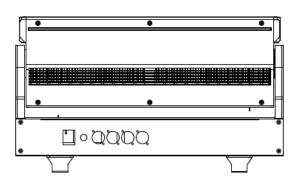



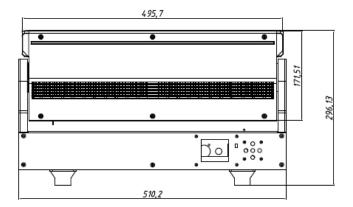





3. Safety Instructions



CAUTION!

Be careful with your operations. With a dangerous voltage you can Suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Don't use the fixture in RGBW full on for more than 10 minutes incase of high temperature damage the fixtures.

4. Operation Instructions

- -The fixture is for beam effect purpose.
- -Don't turn on the fixture if it's been through severe temperature difference like after transportation because it might damage the light due to the environment changes. So make sure to operate the fixture until it is in normal temperature.
- -This light should be keep away from strong shaking during any transportation or movement.
- -Don't pull up the light by only the head, or it might cause damages to the mechanical parts.
- -Don't expose the fixture in overheat, moisture or environment with too much dust when installing it. And don't lay any power cables on the floor. Or it might cause electronic shock to the people.
- -Make sure the installation place is in good safety condition before installing the fixture.
- -Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
- -Make sure the lens are in good condition. It's recommended to replace the units if there are any damages or severe scratch.
- -Make sure the fixture is operated by qualified personnel who knows the fixture before using.
- -Keep the original packages if any second shipment is needed.
- -Don't try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
- -It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

5. Mounting and Installation

Cautions: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas were the fixture might be reached by unauthorized personnel.


Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Never stand directly below the device when mounting, removing, or servicing the fixture from a periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.

Clamp Mounting: The LED Pixel Zoom bar 240 provides a unique mounting bracket assembly that integrates the bottom of the base, and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the "omega bracket". As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly

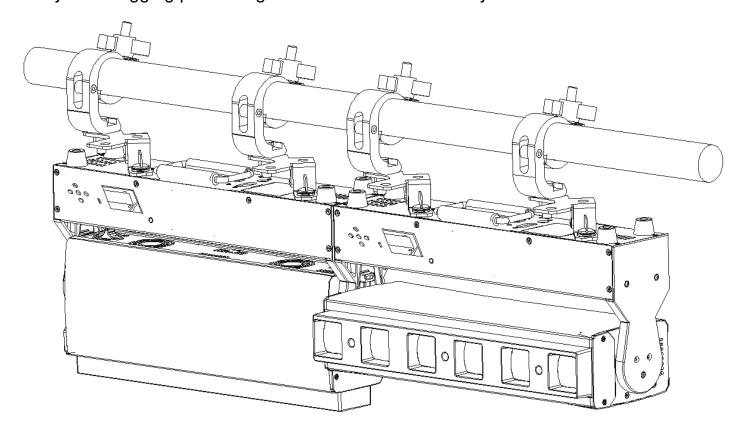

Regardless of the rigging option you choose for your LED pixel Zoom bar 240, always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.

6. DMX-512 control connections


Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. (5-pin connect way is similar)

You can chain multiple Moving heads be connected together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

DMX-512 connection with DMX terminator



For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3,which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

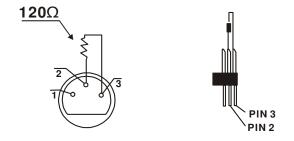

7. DMX Channels

18CH

CH	Function	DMX	Details		
1	Tilt	0-255	Tilt		
2	Tilt Fine	0-255	Tilt fine		
3	Tilt-Speed	0-255	Tilt speed from fast to slow		
4	Zoom	0-255	Zoom		
5	Dimmer	0-255	0-100% dimmer		
6	Dimmer fine	0-255	Dimmer fine		
7	Strobe	0-4	No function		
		5 -200	Strobe from slow to fast		
/		201-205	No function		
		206-255	Random strobe from slow to fast		
8	Red	0-255	Red dimmer		
9	Green	0-255	Green dimmer		
10	Blue	0-255	Blue dimmer		
11	White	0-255	White dimmer		
		0-10	No function		
	Macro effect	11-13	1th Static effect		
		14.07	Every 3 DMX value is one kind of static		
		14-67	effect(2th to19th)		
		68-70	20th static effect		
		71-73	1th Dynamic effect		
12		74-187	Every 3 DMX value is one kind of dynamic		
12		74-107	effect(2th to 39th)		
		188-190	40th Dynamic effect		
		191-193	Colorful dynamic effect 1		
		194-217	Every 3 DMX value is one kind of colorful		
			dynamic effect(2th to 8th)		
		218-220	Colorful dynamic effect 10		
		221-255	Colorful dynamic effect 11		
13	Effect Speed	0-255	Effect speed from slow to fast		
14	Effect direction	0-127	Effect in positive direction		
14		128-255	Effect in reverse direction		
15	Front Color	0-255	Front color macro effect		
16	Back Color	0-255	Background color macro effect		
17	Back Color Dimmer	0-255	Background color dimmer		
18	Reset	0-100	No function		
		101-120	Reset		
		121-255	No function		

32CH

СН	Function	DMX value	Details
1	Tilt	0-255	Tilt movement
2	Tilt Fine	0-255	Tilt fine adjustment
3	Tilt Speed	0-255	Tilt speed control
4	Zoom	0-255	Zoom
5	Dimmer	0-255	0-100% linear dimmer
6	Dimmer Fine	0-255	Dimmer fine
		0-4	No function
7	Ctrobo	5 -200	Strobe from slow to fast
7	Strobe	201-205	No function
		206-255	Random strobe from slow to fast
8	Red 1	0-255	LED 1 Red 0-100% linear dimmer
9	Green 1	0-255	LED 1 Green 0-100% linear dimmer
10	Blue 1	0-255	LED 1 Blue 0-100% linear dimmer
11	White 1	0-255	LED 1 White 0-100% linear dimmer
12	Red 2	0-255	LED 2 Red 0-100% linear dimmer
13	Green 2	0-255	LED 2 Green 0-100% linear dimmer
14	Blue 2	0-255	LED 2 Blue 0-100% linear dimmer
15	White 2	0-255	LED 2 White 0-100% linear dimmer
16	Red 3	0-255	LED 3 Red 0-100% linear dimmer
17	Green 3	0-255	LED 3 Green 0-100% linear dimmer
18	Blue 3	0-255	LED 3 Blue 0-100% linear dimmer
19	White 3	0-255	LED 3 White 0-100% linear dimmer
20	Red 4	0-255	LED 4 Red 0-100% linear dimmer
21	Green 4	0-255	LED 4 Green 0-100% linear dimmer
22	Blue 4	0-255	LED 4 Blue 0-100% linear dimmer
23	White 4	0-255	LED 4 White 0-100% linear dimmer
24	Red 5	0-255	LED 5 Red 0-100% linear dimmer
25	Green 5	0-255	LED 5 Green 0-100% linear dimmer
26	Blue 5	0-255	LED 5 Blue 0-100% linear dimmer
27	White 5	0-255	LED 5 White 0-100% linear dimmer
28	Red 6	0-255	LED 6 Red 0-100% linear dimmer
29	Green 6	0-255	LED 6 Green 0-100% linear dimmer
30	Blue 6	0-255	LED 6 Blue 0-100% linear dimmer
31	White 6	0-255	LED 6 White 0-100% linear dimmer
	Function	0-100	No function
32	Fixture Reset	101-120	Reset
	Reserve	121-255	No function

8. Display instruction

Main menu	Submenu	Level 3	Description	
DMX Address	001-512		DMX address setting	
	DMV Mode	18 CH	18 Channel mode	
	DMX Mode	32 CH	32 Channel mode	
- Fixture		DMX	DMX mode	
Fixture	Run Mode	Auto	Auto-Run mode	
		Sound	Sound activated mode	
	Tilt Inverse	Close/Open	Tilt reverse	
	Tilt	0-255		
	Tilt Fine	0-255		
Manual		0-255	Manual control of each channel	
		0-255		
	Reset	0-255		
		Current Time	How long this time working	
	Time	Total Time	Total working time	
		Power Count	Total power on time	
		Tilt	Tilt motor sensor status	
Information	Sensor	Zoom	Zoom motor sensor status	
		Temp	Temperature sensor status	
	Temperature	Head Temp	Fixture current temperature	
	Software	Panel	Display software version	
	Version	Dimmer	LED driver board software version	
	Password	0-255	Password	
	Tilt	0-255	Tilt default position	
	Zoom1	0-255	Zoom 1 motor default position	
Factory	Red	0-255	Red color default data	
	Green	0-255	Green color default data	
	Blue	0-255	Blue color default data	
	White	0-255	White color default data	
Fixture Reset	Reset	Run/OFF	Reset all motor	
I INTUITE MESEL	Factory	Run/OFF	Reset to factory mode	
	Language	EN/CH	Language setting	
Display	Display Flip	Normal/Reverse	Display reverse 180 degree	
	Display Mode	Show/60s	Screen saver time	

9. Key Features

Voltage: AC110-240V 50/60Hz

Max Power: 300 W

Source: 6pcs 40W RGBW 4in1 led

Beam degree: 1:7 zoom range from 5°-35

Tilt: 220 degree+ fine

LED Lifetime: Average 50,000 hours

Led: pixel control

Strobe: 20 times one second

Dimmer:0-100% linear dimmer

Channel: 18/32 two channel mode

Control mode: DMX-512, Auto-run, Sound activated

Cooling system: fan forced cooling system

Working environment: indoor

Net weight: 9.2 KG

Fixture size: 51*10*30 cm

10. Maintenance and Cleaning

The following points have to be considered during the inspection:

- 1. All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2. There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3. Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4. The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakneness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents. There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions". Should you need any spare parts, please order genuine parts from your local dealer